

alu

A better seat

OP01 24H

User Manual

alu
A better seat

© Alu Design & Services AS | Skibåsen 44, Norway, 4636 Kristiansand

T: +47 46 82 60 00 | info@alu-design.no


www.alu-design.no

USER MANUAL OP01 24H

ARMREST ROTATION


Press the button on the inside of each armrest to rotate it (the armrest rotates 360°).

The armrest can be rotated 180° to adjust the distance between the armrests.

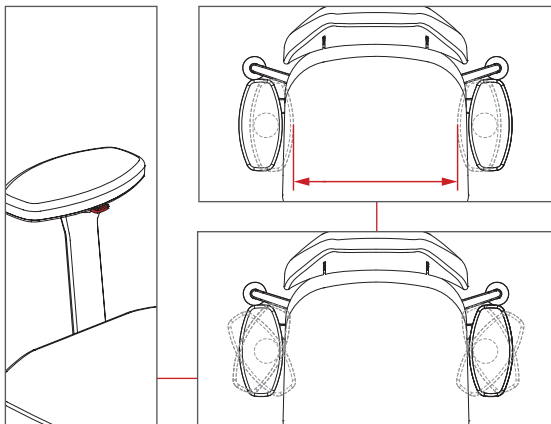


ARMREST ADJUSTMENT FORWARD AND BACKWARD

Manually slide the armrest forward and backward 40 mm.

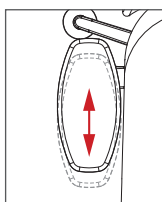


ARMREST ADJUSTMENT UP AND DOWN

Push the outside button on the armrest to adjust them up and down. Release the button to lock the armrest in position.

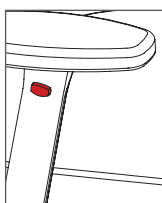


SEAT ADJUSTMENT

Pull the lever out gently to adjust the seat forward and backward.

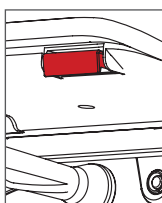


ARMREST ADJUSTMENT IN AND OUT

Undo the quick release lever to adjust the armrest in and out.

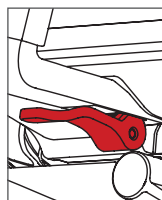


HEIGHT ADJUSTMENT

Turn the lever gently to adjust the height of the chair.

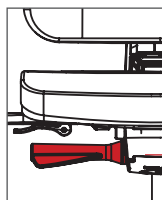

LOGO

Option to have customer logo stitched to the back or front of the chair seats.

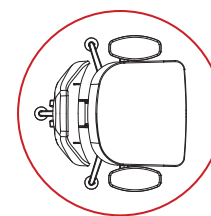


CHAIR ROTATION

The chair rotates 360°.


LUMBAGO ADJUSTMENT UP AND DOWN

Lift the lever behind the backrest to adjust the lumbago support up and down.

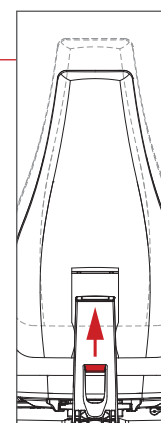


NECK SUPPORT

Integrated neck support.

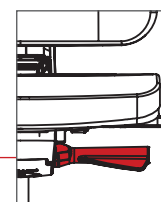



SEAT RECLINE

Turn the lever gently to recline the backrest to desired position.

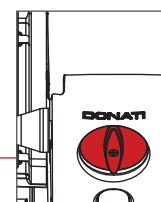

SEAT PIVOT

The seat is self regulating depending on the weight placed on the seat. However the pivoting mechanism can be fine tuned by adjusting the wheel positioned on the front, underside of the seat.

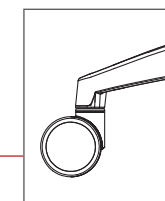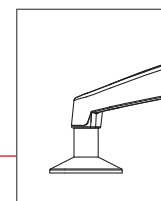

FOOT OPTIONS

Choose between glides or casters for a stationary or moving office chair.

For more detailed information please refer to installation and user manuals that follow every chair delivered. Please maintain the seat upholstery with mild detergents or as recommended.