

alu

A better seat

# Alutech 200 Series User Manual

alu  
A better seat

© Alu Design & Services AS | Skibåsen 44, Norway, 4636 Kristiansand

T: +47 46 82 60 00 | [info@alu-design.no](mailto:info@alu-design.no)

[www.alu-design.no](http://www.alu-design.no)

# USER MANUAL ALUTECH 200 SERIES

## HEIGHT ADJUSTMENT

Lift the lever gently to adjust the sitting height of the chair.

The function is operated by gas struts, so please leave the chair when raising the height, but remain seated when lowering the height.

## DECKRAIL MOVEMENT

Lift the lever gently to release the break from the deckrail.


Please ensure to push the lever back to lock the seat into position. The chair should always be locked on the rail to avoid injury.

NOTE: This function applies only if the chair is mounted onto a deckrail.

## CHAIR ROTATION

Unscrew the wheel to adjust the chair rotation (the chair rotates 360°). Remember to tighten the wheel.

You may leave the chair in open position, but it is not recommended in heavy seas.

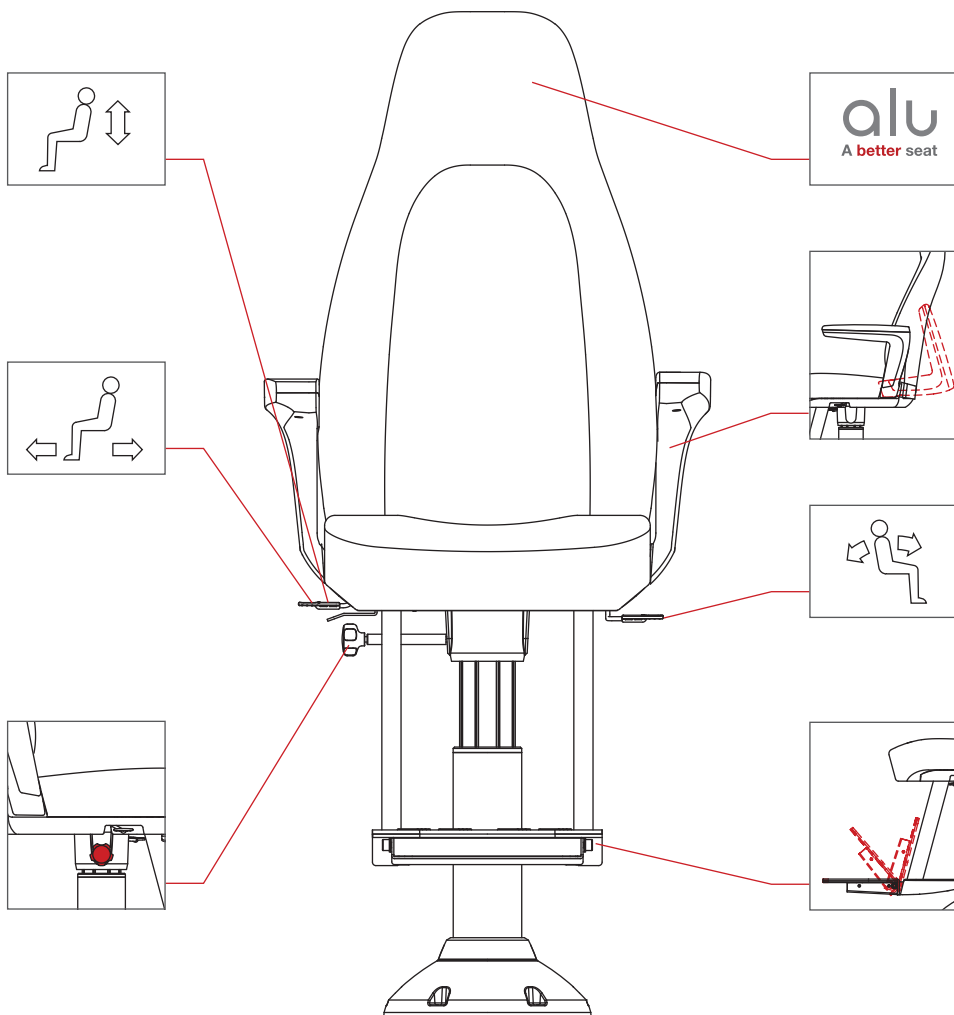

**alu**  
A better seat

## LOGO

Option to have customer logo stitched to the back or front of the chair seats.

## ARMREST ADJUSTMENT

Flip the armrest backwards if more space is required.

## BACKREST ADJUSTMENT

Lift the lever gently onto recline the seat into the desired position. The maximum reclining angle varies, depending on the type of Alutech 200 delivered.

## FOOTREST ADJUSTMENT

Manually rotate the footrest up and down.

For more detailed information please refer to installation and user manuals that follow every chair delivered. Please maintain the seat upholstery with mild detergents or as recommended.